



A list of mounting parts

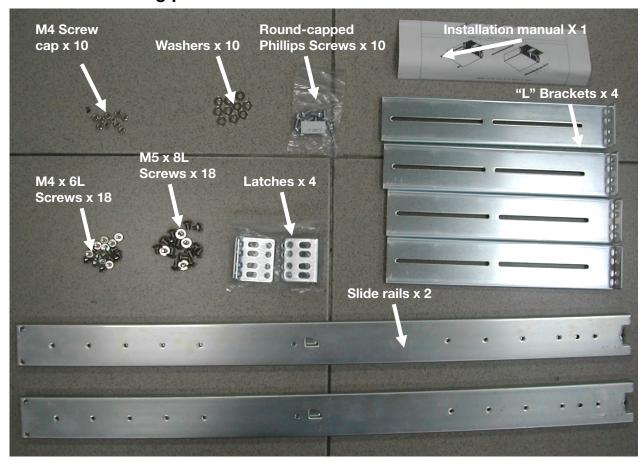

Step 1

Take the sliding rail apart by sliding out the center slide.

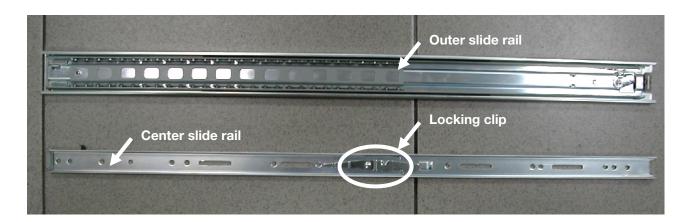


Attention:

You will see a locking clip at the middle point of the center slide. By pushing down the locking clip, you will be able to remove the center slide out the sliding rail.

Step 2

Install the center slide to both sides of the chassis, then secure the center slides with M4*6L screws.

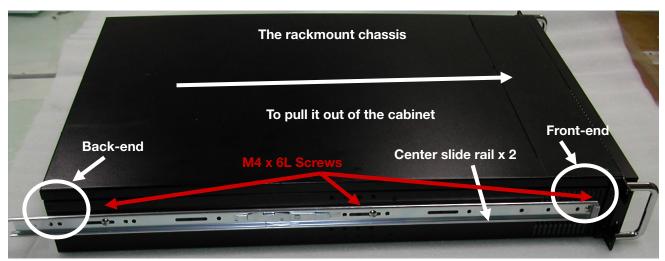

Attention:

- 1. Put the center slide right next to the chassis. Align the center slide holes to the chassis' mounting holes and install all 3 screws for each slide.
- 2. From all the way out of the cabinet, the rail has front and back sections. Please do not mix that.
- 3. Please leave a 10-20mm space gap between the front point of the slide and the handle of the chassis.

Step 3

Attach the 4 "L" brackets on to the 2 outer slide rails. Please do not make it tight so that it will be adjustable according to the size of the cabinet.



To pull it out of the cabinet




M4 x 6 Screws and washers

Attention:

- 1. Please do not tighten it so that the brackets can slide and adjust to the width of the cabinet.
- 2. While adjusting, please align the positions of "L" brackets on both 2 slide rails.

Step 4 (type1)

Install the latches onto the front-side of the pillar of a rackmount cabinet.

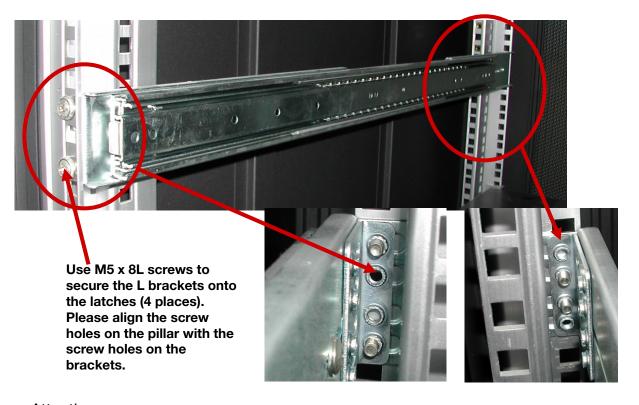


Attention:

- 1. Adjust the brackets according to the width of the cabinet.
- 2. Make sure to align the 2 slide rails on the rackmount and secure the brackets on to the outer slide rails via screws.
- 3. Make sure that the 2 sliding rails are at the same height. (The positions of the screw holes must be identical as well.)


Step 4 (type2)

Install the latches onto the profile of the pillar of a rackmount cabinet.

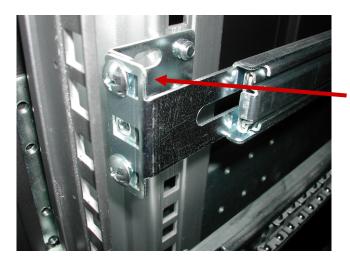

Use M5 x 8L screws to secure the brackets together with the latches to the cabinet rackmount. The setup is similar to type 1

Step 5Install the chassis with center slides to the cabinet by sliding into the outer slides.

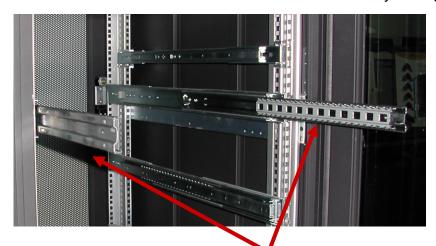


1. Pull the outer slide all the way until it reaches the limit.



2. Install the chassis with center slides to the cabinet by sliding into the outer slides. In order to successfully push in, please pull up the locking clips.



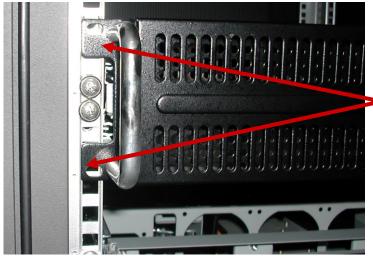

3. Use M5 square locking nuts that come with the cabinet and M5 Round-capped Phillips screws to secure the chassis to the rackmount cabinet.(4 places)

Thank you for purchasing a quality Rosewill Product.

Please register your product at: www.rosewill.com for complete warranty information and future support for your product.